




CHATFIELD GREEN ROOFING
PO BOX 501
ELBRIDGE, NY 13060
PHONE: (315) 466-2162
www.chatfieldgreenroofing.com

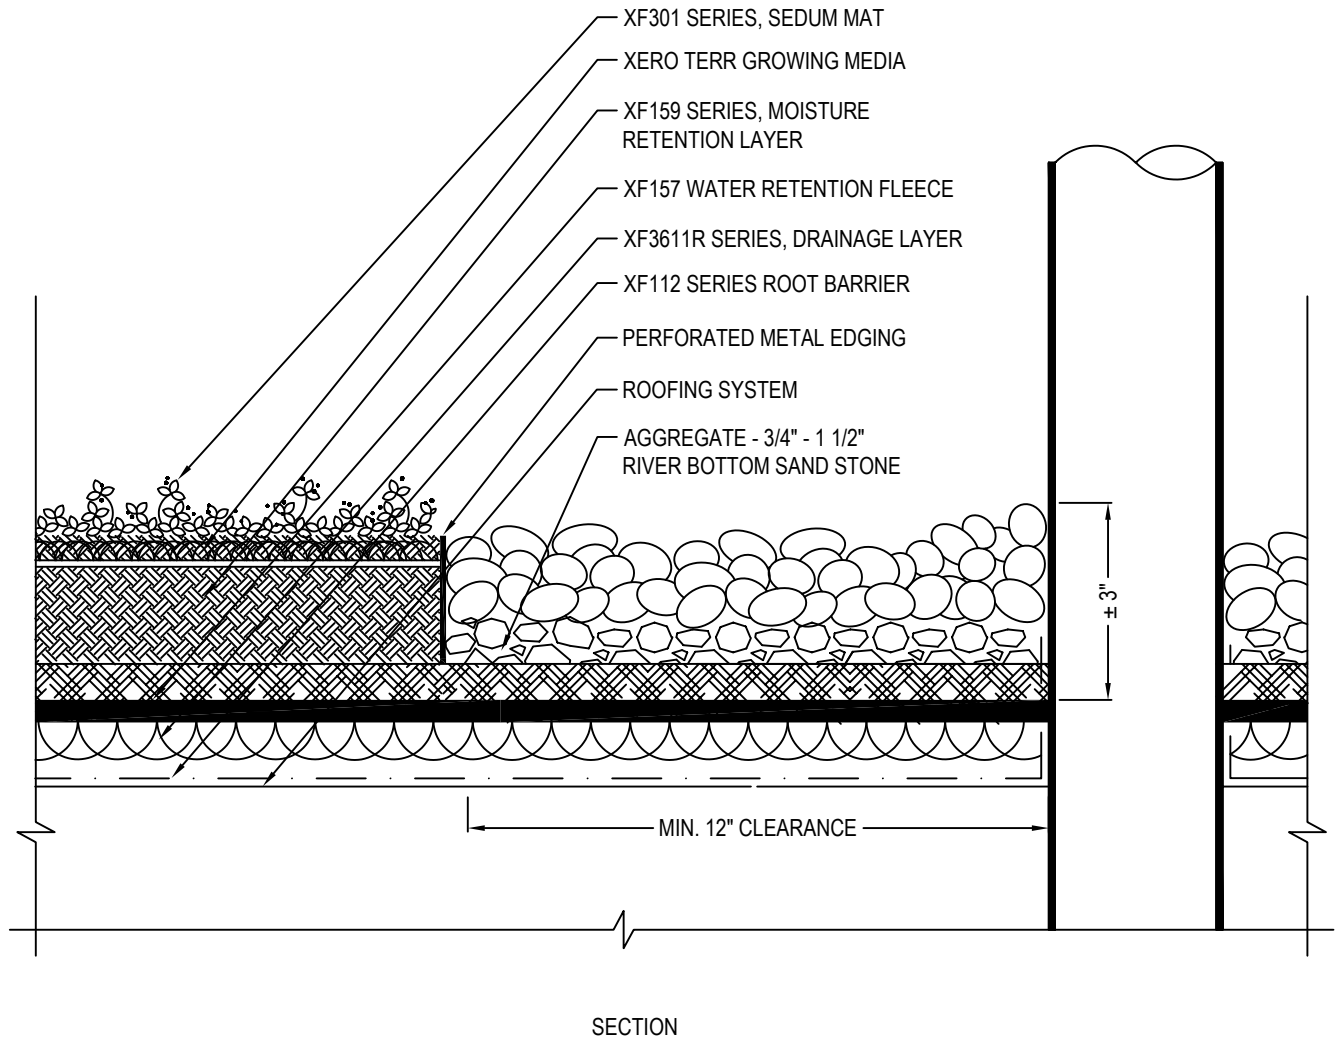


MANUFACTURER NOTES:

1. INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 5262-011

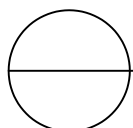

XF SYSTEM

XF SYSTEM - DETAIL AT VENT PIPE WITH BALLAST